



Tools required for disassembly and reassembly.

Torque wrench 57Nm [500 lb-in] capacity
 300-450 [12-16]* breaker bar
 9/16 socket
 Small screwdriver 150-200 x 6,5 [6-8 x 1/4] blade
 3/16 Allen wrench
 Press

* Unless indicated otherwise, measurements
 are given in mm [inches]

** Shaft seal installation tool (600496)

** Bullet (600465) for 1 diameter shafts

The following tools are not necessary for disassembly and reassembly, but are extremely helpful.

Alignment studs (2)

